



WESTERN CAMPFYRE (WCF) LOG SET

Log Placement Instructions



18" log set shown

Important: Disregard the ember screen installation information in your burner system owner's manual.

This log set uses a unique screen different from the screen shown in your burner system owner's manual. Follow these instructions for ember and screen placement.

EMBER SCREEN PLACEMENT

After filling the burner pan with sand, securely fit the ember screen over the rear of the pan, so that it rests on it with approximately two inches (2") of screen overhanging beyond the back of the pan (see Fig. 1-2). Spread your glowing embers on the screen and over the sand. Continue with the log placement as shown on the following pages.

LOG PLACEMENT

These log sets feature notches and indentations to assist in log placement and provide stability. The following pages will have detailed placement instructions for your specific log set.

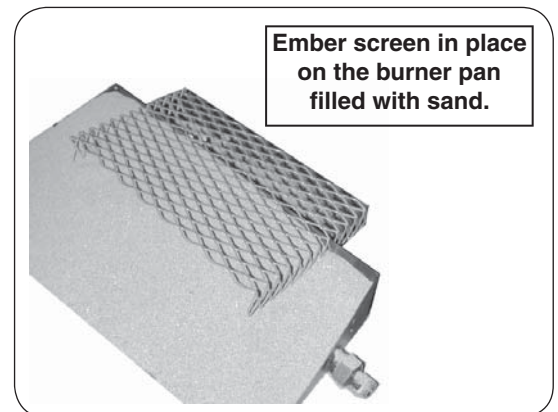


Fig. 1-1







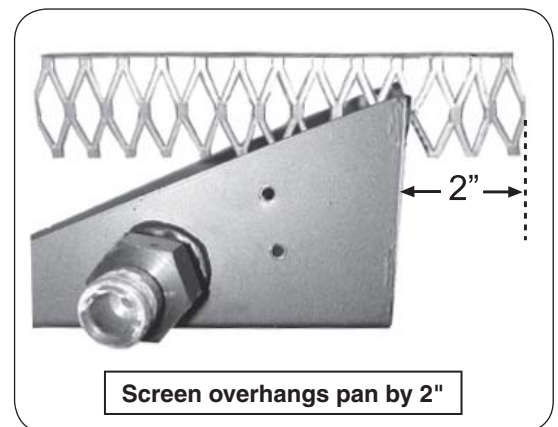


Fig. 1-2

Western Campfyre Log Placement Instructions (18" model)

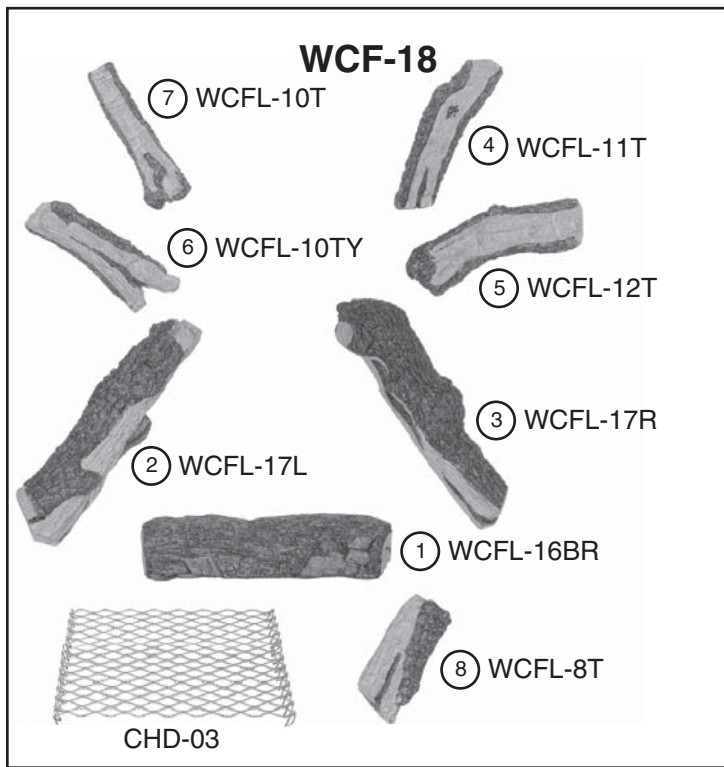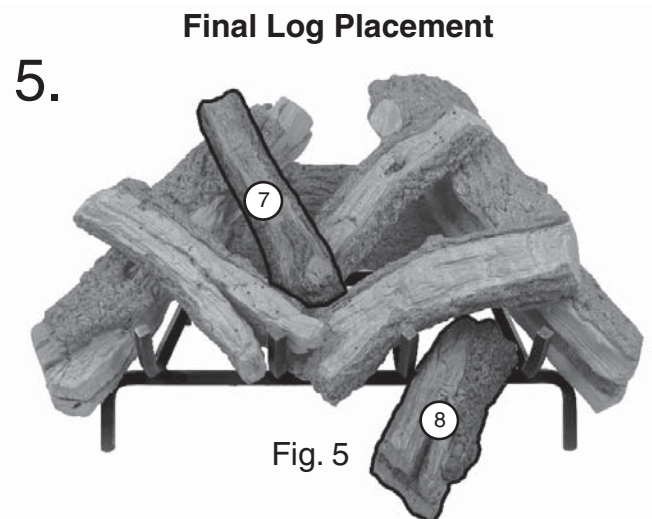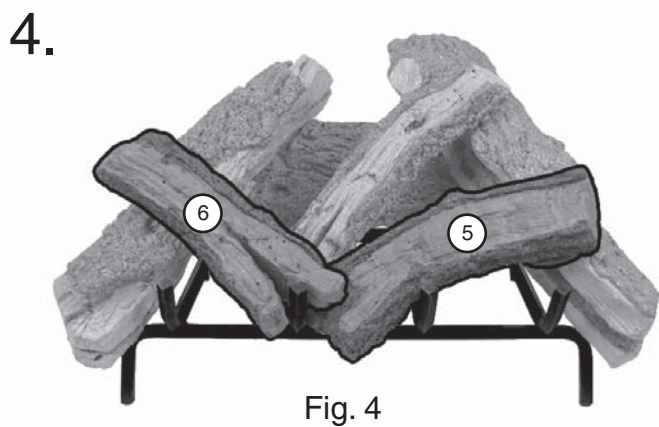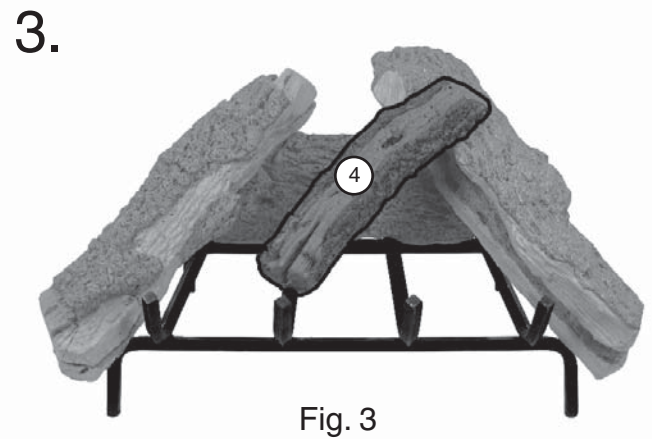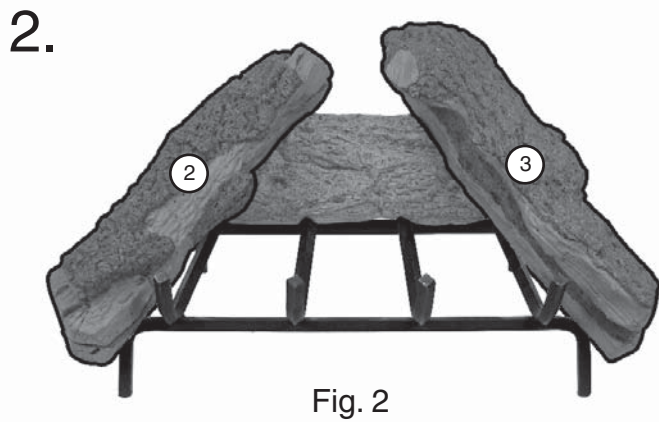


CAUTION: Burn hazard! Logs will remain hot for some time after use.

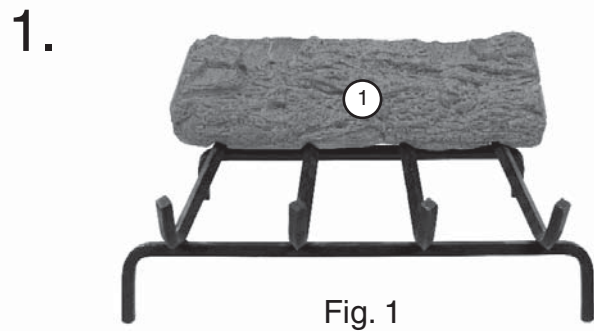

Western Campfire Log Placement Instructions (24" model)

WCF-24

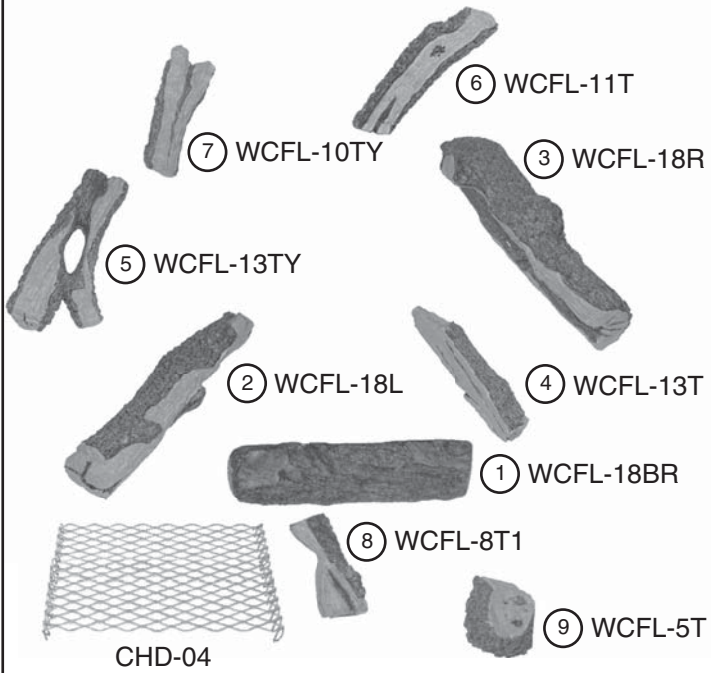

CAUTION: Burn hazard! Logs will remain hot for some time after use.

1.

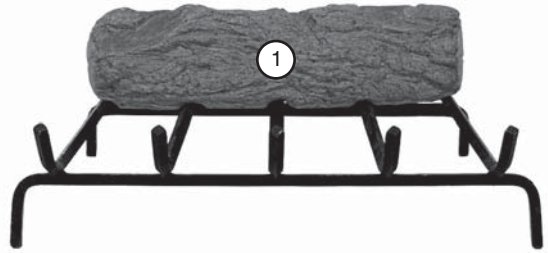


Fig. 1

2.

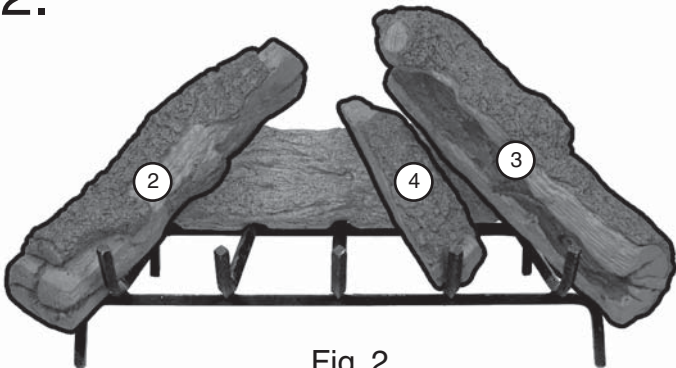


Fig. 2

3.

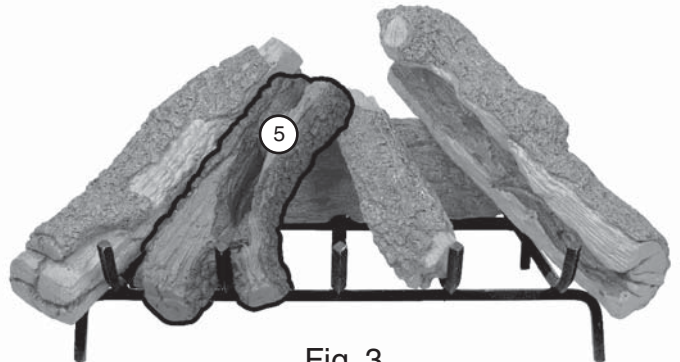


Fig. 3

Final Log Placement

4.

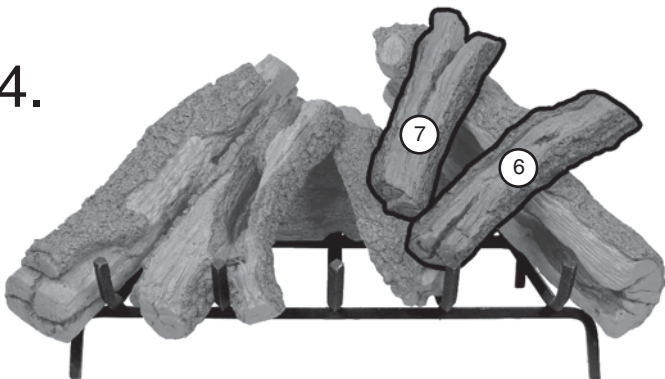


Fig. 4


5.



Fig. 5

Western Campfire Log Placement Instructions (30" model)

WCF-30

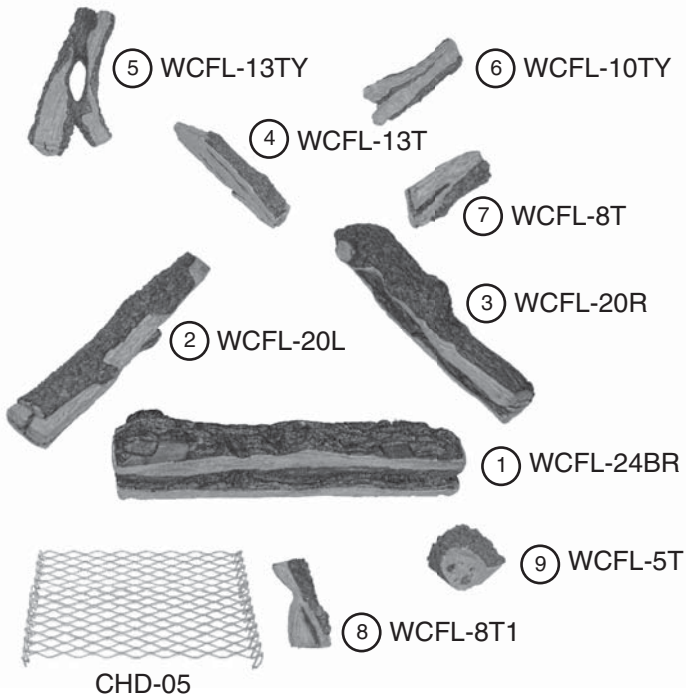

CAUTION: Burn hazard! Logs will remain hot for some time after use.

1.

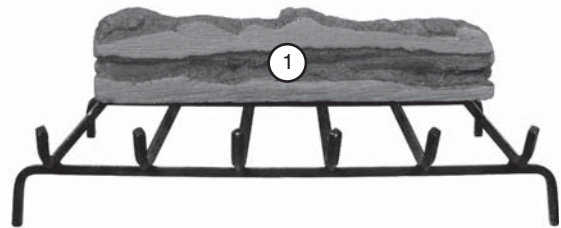


Fig. 1

2.

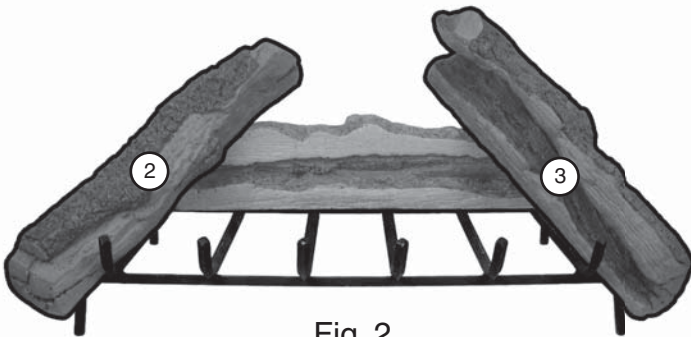


Fig. 2

3.

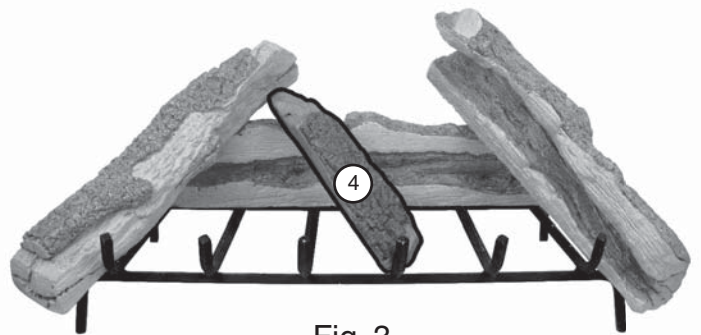


Fig. 3

4.

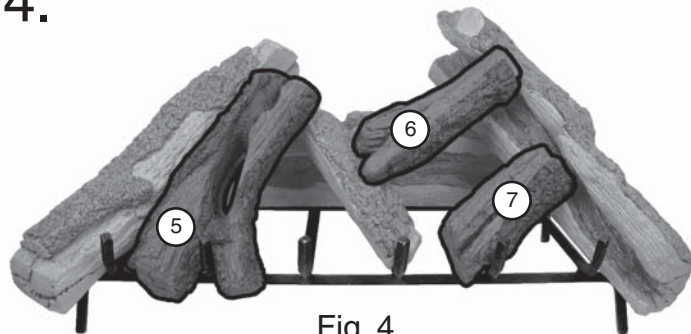


Fig. 4

Final Log Placement

5.



Fig. 5