



Intelligent Design™

Step 1

Attach front legs to seat assembly using (4) 1 3/4" bolts.

Step 2

Attach arm assemblies to the seat assembly and the back assembly using (6) 1 3/4" bolts.

Step 3

Attach metal brace to the seat using (2) 1 1/2" bolts.

Step 4

Attach stretchers to the legs using (8) 2 1/4" bolts.


- ___ (2) Sideframe
- ___ (1) Seat
- ___ (1) Back
- ___ (4) Stretcher
- ___ (2) Front leg
- ___ (1) Metal brace
- ___ (1) Hardware pack

TOOLS NEEDED

4mm HEX KEY: INCLUDED

Qty.	Description
2	A-1/4-20 X 1-1/2 WAFER SHCS
10	B-1/4-20 X 1-3/4 WAFER SHCS
8	C-1/4-20 X 2-1/4 WAFER SHCS

ASSEMBLY INSTRUCTIONS

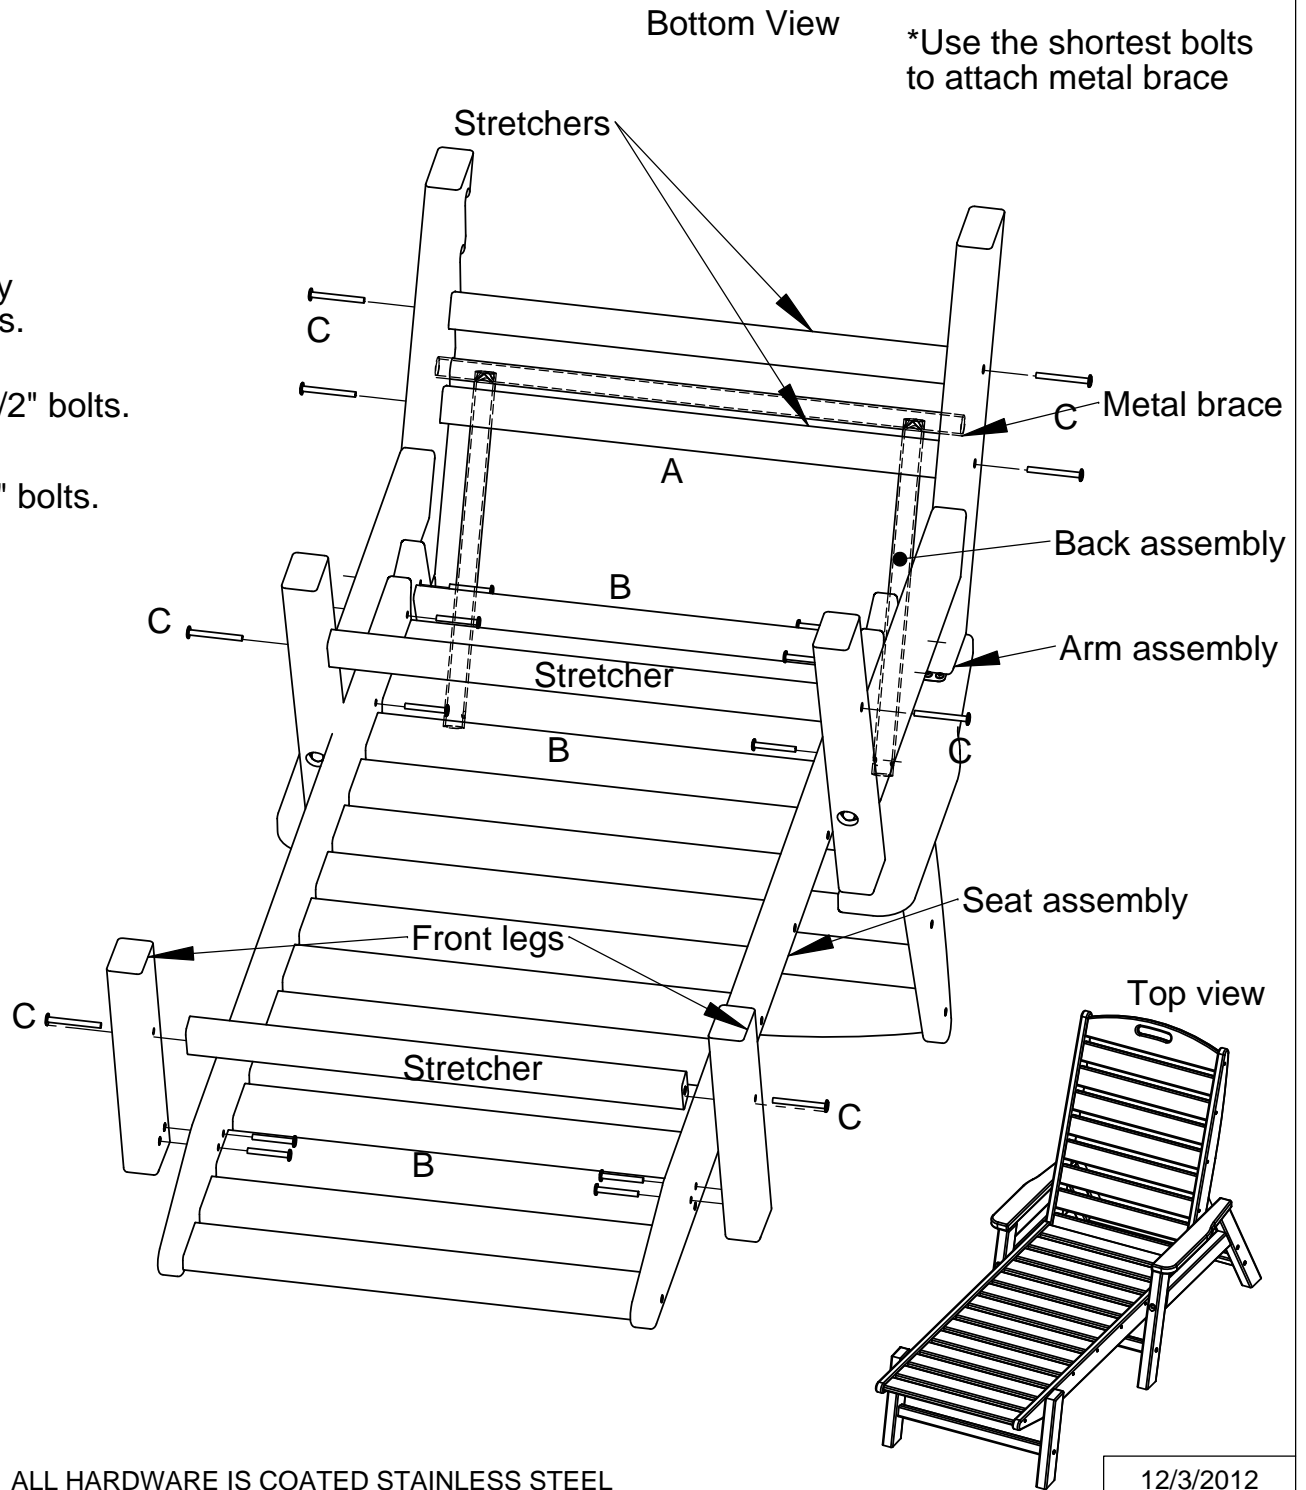

ALL HARDWARE IS COATED STAINLESS STEEL

12/3/2012