



Intelligent Design™

Model: PST48

Step 1


Lay Table top upside down on a flat surface. Attach Leg assemblies to Table top using (8) 3 1/4" Chair Bolts and nuts. Do not tighten.

Step 2

Attach Braces to Leg assemblies using (4) 3" Lag bolts and washers.




Step 3





Set table upright and tighten all bolts

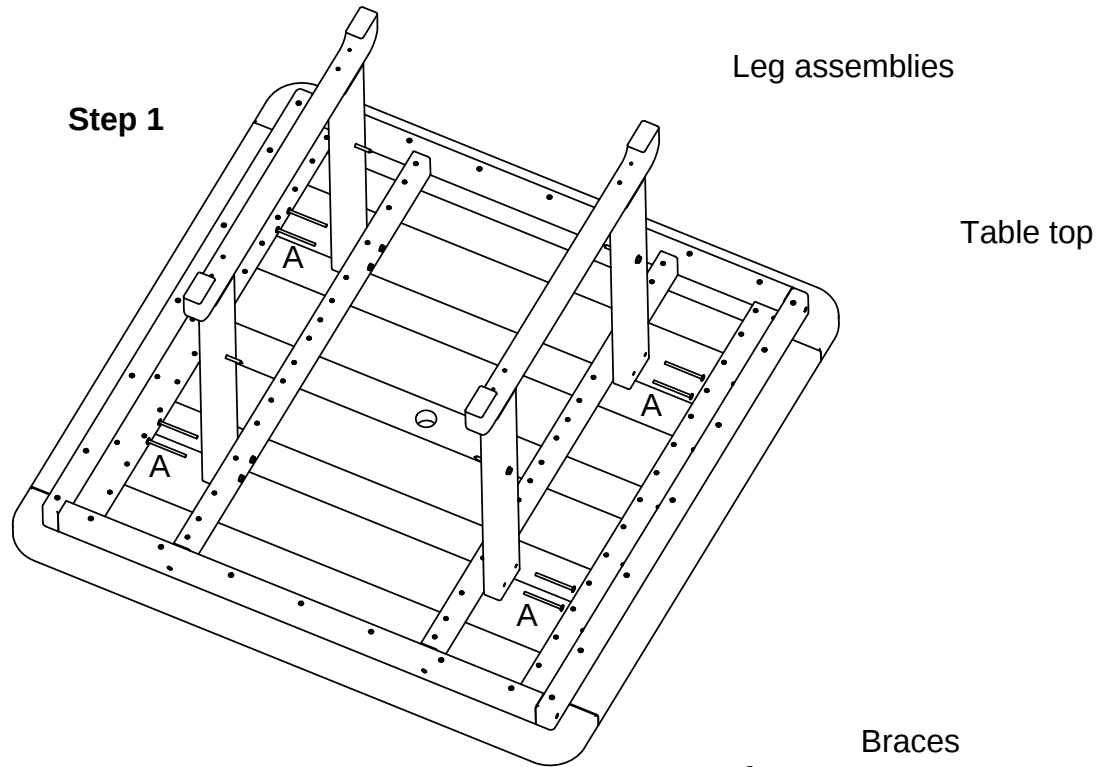

TOOLS NEEDED

7/16 Socket Drive or Wrench
4mm HEX KEY, ALLEN, T-HANDLE
(INCLUDED)

Qty.	Description
4	 1/4 FLAT WASHER
4	 B - 1/4 X 3 HEX LAG SCREW
8	 1/4-20 FLANGE NUT
8	 A - 1/4-20 X 3-1/4 WAFER SHCS

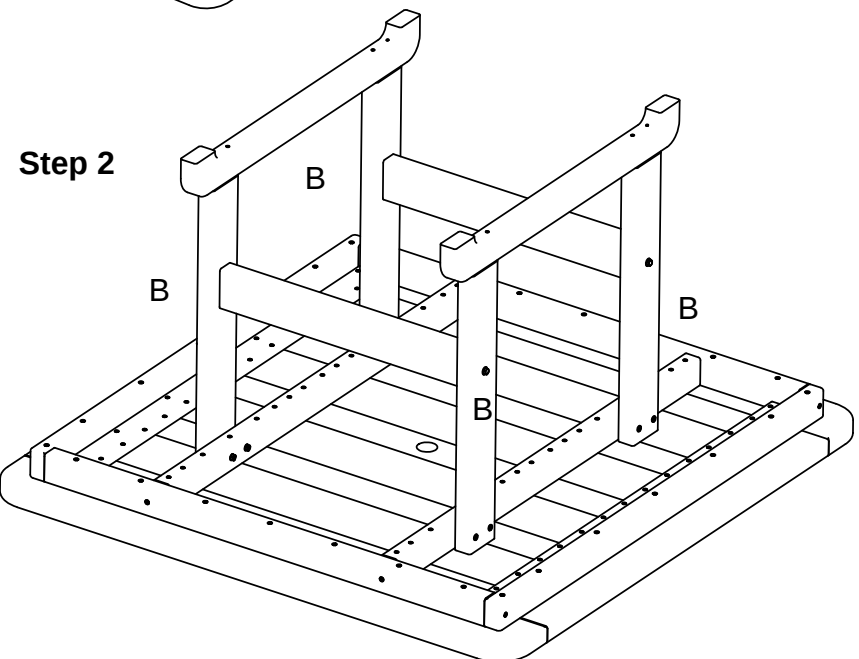

Step 2