## P@LYWOOD\*

Intelligent Design™

Model: RCT38, RKT38

- \_\_(1) Table top
- \_\_(4) Legs
- \_(2) Short Brace
- \_\_(2) Long Brace
- \_\_(1) Hardware pack

## TOOLS NEEDED

4MM HEX KEY, ALLEN, T-HANDLE (INCLUDED)


Qty. Description

12

.27 X 2-1/2 SOCKET WAFER A

Step 1

Lay table top on flat surface.
Attach legs to table top and braces to legs using (8) 2 1/2" screws.

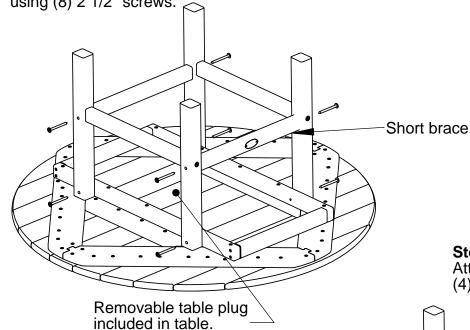

Step 2
Attach braces to legs using (4) 2 1/2" screws.

