



Model:  
TGD200, TGD201, TGD202

- (1) CHAIR
- (2) ARM ASMB (LH/RH)
- (1) HARDWARE PACK

**Step 1**  
Attach back of arm by threading the dowel screw attached to the arm into the pilot hole until the arm is snug against the back leg.


**Step 2**  
Attach (A) bolts thru the seat frame into the insert nuts on the arm supports

## TOOLS NEEDED

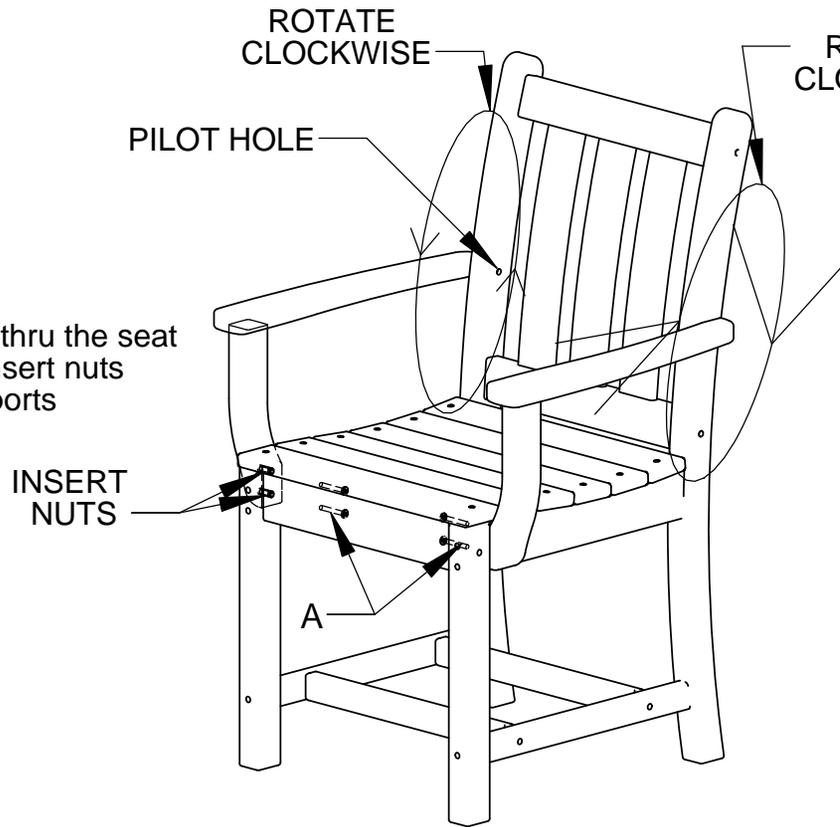

ROTATE  
CLOCKWISE

TGD201

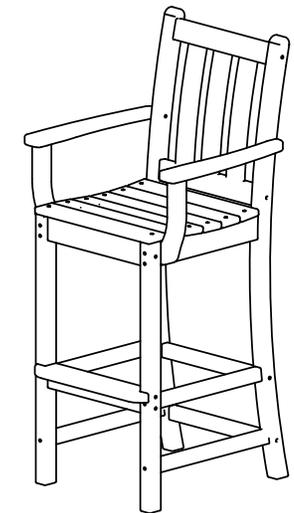

TGD202

Qty.	Description
4	A -1/4-20 X 1-3/4 WAFER SHCS
1	HDWPK-#8 SCREW PLUGS, 4X (EXTRAS)

